


# C19 Databus Drive drilling template

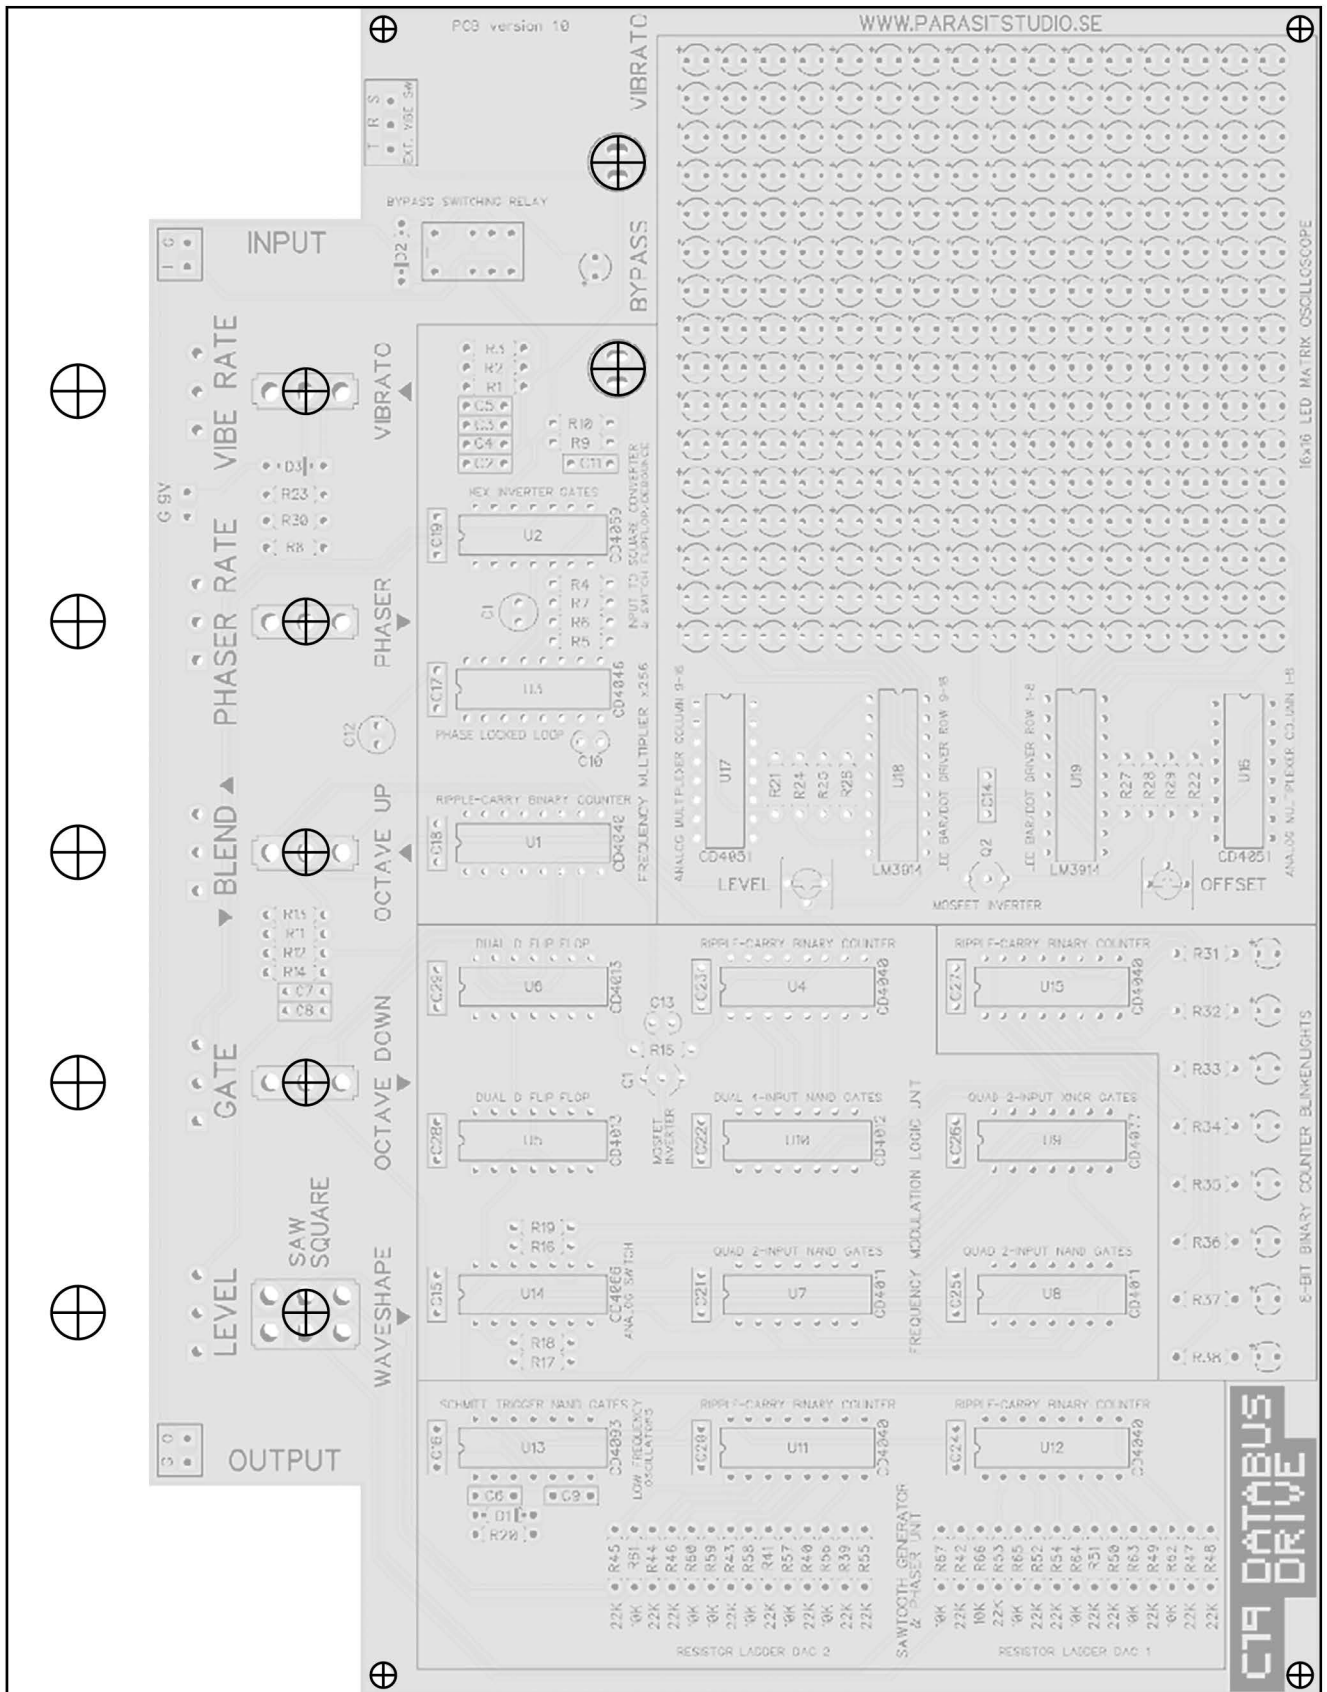

Make sure your printer isn't doing any scaling.  
Measure and confirm before drilling.  
Hold the template against the PCB to be sure that it's the right size.  
Drill holes for the input/output jacks and DC jack to your own preference.

Drill hole sizes:  
Potentiometer and push buttons: 7mm  
switches: 6mm  
standoff/screws: 3mm  
DC jack size: 12mm (8mm for Lumberg type)  
6.3mm jacks: 9 (or 9.5mm, depending on type)